



IMPORTANT

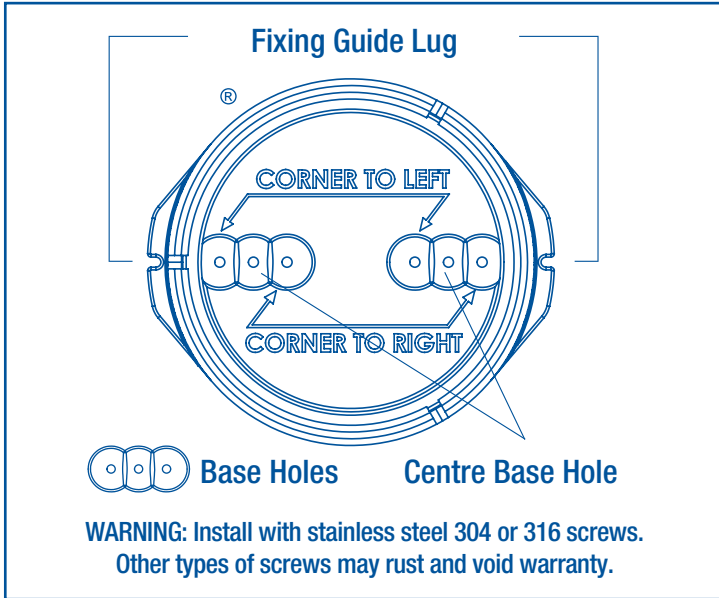

ABS Glide Slide Mounting Position

When installing all Hosfab® Shower Kit, please ensure the handpiece cradle support of the ABS GLIDE SLIDE is positioned to the side of the grab rail as shown in the image below. CRADLE MUST NOT FACE USER.


Incorrect installation will only result in improper use and damage to the ABS GLIDE SLIDE cradle. Warranty does not cover damage caused by improper use or faulty installation.

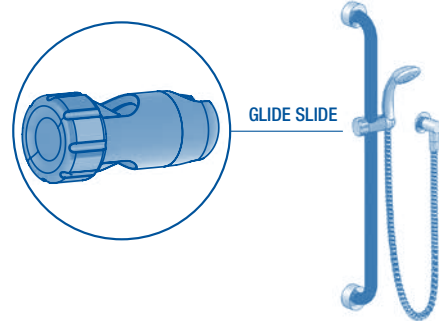

Brass Friction Slide Mounting Position

When installing all Hosfab® Shower Kit, please ensure the handpiece cradle support of the BRASS FRICTION SLIDE is positioned to the side of the grab rail as shown in the image below. CRADLE MUST NOT FACE USER.

Incorrect installation will only result in improper use and damage to the BRASS FRICTION SLIDE cradle. Warranty does not cover damage caused by improper use or faulty installation.

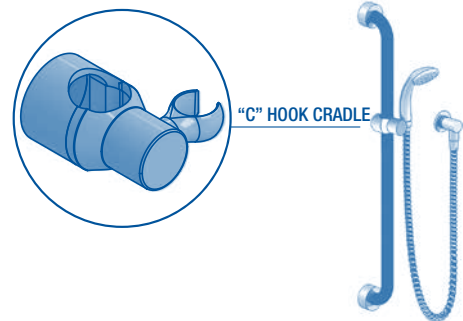

1

Install straight grab rails including the horizontal section of any grab rail as per AS 1428.1, 800-810mm from floor to top of rail. Make sure wall surface is flat and free from contaminants.

2

For STRAIGHT grab rails, position the flange protector guide lugs either vertical or horizontal. For CORNER grab rails, position the guide lugs horizontally ONLY then mark at fixing guide lugs.

3

Remove flange protector from grab rail flange. Align guide lug marks from step 2 and mark wall through base holes to pinpoint screw holes.

4

WALL MOUNT PLATE

Fit dress ring if applicable. Drill spot marks with 7mm bit. Screw wall mount plate to wall. ENSURE SCREWS ENGAGE WALL STUD OR OTHER SOLID SUBSTRATE.

5

LOCK NUT

Fit grab rail into wall mount plate and tighten lock nut firmly.

6

FLANGE COVER

Screw flange cover to wall mount plate to secure the Thermoplastic Elastomer fitted Hygienic Seal®.

Corner to right Corner to left

When marking out these grab rails and corner of rail is left of the flange, mark base holes CORNER TO LEFT. If corner rail is right, mark base holes CORNER TO RIGHT.

NOTE: Do not use FLANGE PROTECTOR INSTALLATION GUIDE for corner grab rails if screws have to be positioned vertically.

Our Promise

Con-Serv Corporation Australia Pty Ltd warrants all of its products (as below) with a Limited Lifetime Warranty on all mechanical parts from manufacturing defects in materials and workmanship under normal use in a domestic installation for as long as the original purchaser owns their home into which the particular product(s) was/were installed. A five year warranty (also on the terms below) will apply to commercial installations, irrespective of ownership. Con-Serv will repair or replace defective items correctly installed as per the Con-Serv installation instructions. Con-Serv will not be liable for defects arising through normal wear and tear. Item(s) must be returned with proof of purchase to Con-Serv at 17 Glentanna Street, Kedron, Queensland 4031. We will attend to your warranty claim after we make appropriate investigations. Contact our Service Manager during normal office hours on 1300 467 322 or at our email address of warranty@con-serv.com.au. If a warranty claim is accepted, Con-Serv will bear the reasonable costs of the return of the defective item(s) to us. A claim for expenses associated with making a claim for a defective product must be in writing and submitted to us with copies of supporting documents. The benefits given under our warranty are in addition to other rights and remedies of the customer under a law in relation to goods and services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or a refund for a major failure and compensation for any other reasonable foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Visit the Con-Serv website www.con-serv.com.au for the detailed warranty policy.

